

Servo Reverse

The Digital Range

Plug your servo into the flying lead on the Servo Reverse Unit. Plug the other Servo Reverse Unit lead into the selected channel on the receiver. The servo will operate with full travel but in the reverse direction.

SET-UP

With the stick at neutral, use the set key to move the servo neutral to the required position. The servo will move one step each time the key is released. When the limit of the adjustment is reached for one direction, the movement will reverse to move in the opposite direction. If you accidentally go past the desired position, it will be necessary to round the loop again. The neutral can be adjusted over a range of about 10% of travel.

If you wish to change the neutral point at any time, simply repeat the set-up procedure.

SAFETY

Please ensure that the selection key cannot be pressed accidentally while the unit is in use.

